


Mig 410

Mig 510

Origo TM

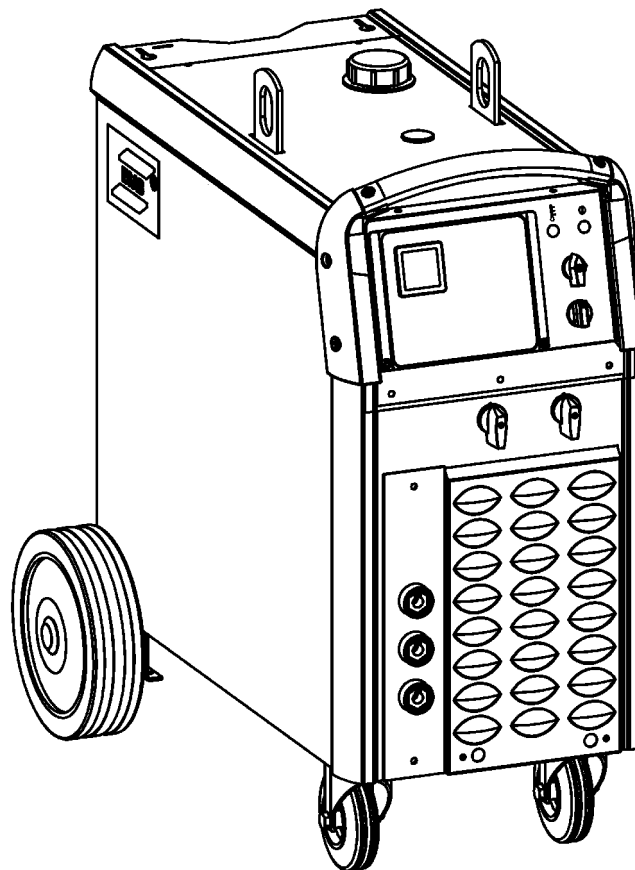

Instruction manual

| | |
|--|-----------|
| 1 DIRECTIVE | 3 |
| 2 SAFETY | 3 |
| 3 INTRODUCTION | 5 |
| 3.1 Equipment | 5 |
| 4 TECHNICAL DATA | 5 |
| 5 INSTALLATION | 6 |
| 5.1 Placing | 7 |
| 5.2 Assembly of components | 7 |
| 5.3 Assembly of counter balance | 8 |
| 5.4 Electrical installation | 8 |
| 5.5 Mains power supply | 10 |
| 6 OPERATION | 11 |
| 6.1 Connection and control devices | 11 |
| 6.2 Start | 12 |
| 6.3 Overheating protection | 12 |
| 6.4 Water connection | 12 |
| 6.5 Water flow guard | 12 |
| 6.6 Idle mode | 12 |
| 6.7 Inductance | 12 |
| 7 MAINTENANCE | 13 |
| 7.1 Inspection and cleaning | 13 |
| 7.2 Topping up the coolant | 13 |
| 8 FAULT TRACING | 14 |
| 9 ORDERING OF SPARE PARTS | 14 |
| DIAGRAM | 15 |
| ACCESSORIES | 20 |

1 DIRECTIVE

DECLARATION OF CONFORMITY

ESAB AB, Welding Equipment, SE-695 81 Laxå, Sweden, gives its unreserved guarantee that welding power source Origo™ Mig 410 / Origo™ Mig 510 from serial number 627 are constructed and tested in compliance with the standard EN 60974-1 and EN 60974-10 in accordance with the requirements of directive (2006/95/EC) and (2004/108/EEC).

Laxå 2007-01-17




Kent Eimbrodt
Global Director
Equipment and Automation

2 SAFETY

Users of ESAB welding equipment have the ultimate responsibility for ensuring that anyone who works on or near the equipment observes all the relevant safety precautions. Safety precautions must meet the requirements that apply to this type of welding equipment. The following recommendations should be observed in addition to the standard regulations that apply to the workplace.

All work must be carried out by trained personnel well-acquainted with the operation of the welding equipment. Incorrect operation of the equipment may lead to hazardous situations which can result in injury to the operator and damage to the equipment.

1. Anyone who uses the welding equipment must be familiar with:
 - its operation
 - location of emergency stops
 - its function
 - relevant safety precautions
 - welding
2. The operator must ensure that:
 - no unauthorised person is stationed within the working area of the equipment when it is started up.
 - no-one is unprotected when the arc is struck
3. The workplace must:
 - be suitable for the purpose
 - be free from draughts
4. Personal safety equipment
 - Always wear recommended personal safety equipment, such as safety glasses, flame-proof clothing, safety gloves.
 - Do not wear loose-fitting items, such as scarves, bracelets, rings, etc., which could become trapped or cause burns.
5. General precautions
 - Make sure the return cable is connected securely.
 - Work on high voltage equipment **may only be carried out by a qualified electrician.**
 - Appropriate fire extinguishing equipment must be clearly marked and close at hand.
 - Lubrication and maintenance must **not** be carried out on the equipment during operation.

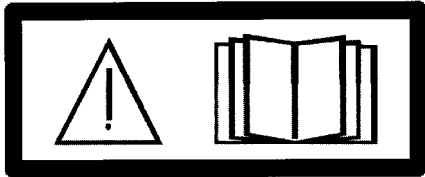

WARNING!

Read and understand the instruction manual before installing or operating.



WARNING



ARC WELDING AND CUTTING CAN BE INJURIOUS TO YOURSELF AND OTHERS. TAKE PRECAUTIONS WHEN WELDING. ASK FOR YOUR EMPLOYER'S SAFETY PRACTICES WHICH SHOULD BE BASED ON MANUFACTURERS' HAZARD DATA.

ELECTRIC SHOCK - Can kill

- Install and earth the welding unit in accordance with applicable standards.
- Do not touch live electrical parts or electrodes with bare skin, wet gloves or wet clothing.
- Insulate yourself from earth and the workpiece.
- Ensure your working stance is safe.

FUMES AND GASES - Can be dangerous to health

- Keep your head out of the fumes.
- Use ventilation, extraction at the arc, or both, to take fumes and gases away from your breathing zone and the general area.

ARC RAYS - Can injure eyes and burn skin.

- Protect your eyes and body. Use the correct welding screen and filter lens and wear protective clothing.
- Protect bystanders with suitable screens or curtains.

FIRE HAZARD

- Sparks (spatter) can cause fire. Make sure therefore that there are no inflammable materials nearby.

NOISE - Excessive noise can damage hearing

- Protect your ears. Use earmuffs or other hearing protection.
- Warn bystanders of the risk.

MALFUNCTION - Call for expert assistance in the event of malfunction.

READ AND UNDERSTAND THE INSTRUCTION MANUAL BEFORE INSTALLING OR OPERATING.

PROTECT YOURSELF AND OTHERS!




WARNING!

Do not use the power source for thawing frozen pipes.



This product is solely intended for arc welding.

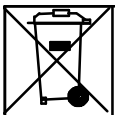

Do not dispose of electrical equipment together with normal waste!

In observance of European Directive 2002/96/EC on Waste Electrical and Electronic Equipment and its implementation in accordance with national law, electrical equipment that has reached the end of its life must be collected separately and returned to an environmentally compatible recycling facility. As the owner of the equipment, you should get information on approved collection systems from our local representative.

By applying this European Directive you will improve the environment and human health!

3 INTRODUCTION

The Origo™ Mig 410 and Origo™ Mig 510 are step switched power sources designed for MIG/MAG-welding together with wire feed units Origo™ Feed 30x, Origo™ Feed 48x and the most of ESAB wire feeders.

The power units are fan-cooled and equipped with thermal overload protection.

The machines can be fitted with an instrument for display of current and voltage. It incorporates a hold function and can be calibrated.

The machines can be fitted with a flow guard.

ESAB's accessories for the product can be found on page 20.



3.1 Equipment

The power source is supplied with:

- Return cable 5m with return clamp
- Shelf for gas cylinder
- Guide pin for wire feed unit
- Instruction manual

4 TECHNICAL DATA

| Origo™ Mig 410 | | |
|--|----------------------|--|
| Voltage | 400-415V, 3~50/60 Hz | 230/400-415/500V 3~50 Hz 230/440-460 3~60Hz |
| Permissible load at 100 % duty cycle | 280 A/28 V | 280 A/28 V |
| at 60 % duty cycle | 365 A/32 V | 365 A/32 V |
| at 50 % duty cycle | 400 A/34 V | 400 A/34 V |
| Setting range (DC) | 50A/16,5V-400A/34V | 50A/16,5V-400A/34V |
| Open circuit voltage | 17-45 V | 17-45 V |
| Open circuit power | 360 W | 360 W |
| with cooling unit | 600 W | 600 W |
| Efficiency at max current | 71% | 71% |
| Power factor at max current | 0,98 | 0,98 |
| Control voltage | 42 V, 50/60 Hz | 42 V, 50/60 Hz |
| Dimensions l x w x h | 812 x 552 x 925 | 812 x 552 x 925 |
| Weight | 144 kg | 145 kg |
| with cooling unit | 158 kg | 158 kg |
| Operating temperature | -10 to +40°C | -10 to +40°C |
| Enclosure class | IP 23 | IP 23 |
| Application classification | S | S |

| Origo™ Mig 510 | | |
|--|---|--|
| Voltage | 400-415V, 3~50/60 Hz | 230/400-415/500V 3~50 Hz 230/440-460 3~60Hz |
| Permissible load at 100 % duty cycle | 390 A/33,5 V | 390 A/33,5 V |
| at 60 % duty cycle | 500 A/39 V | 500 A/39 V |
| Setting range (DC) | 50A/16,5V-500A/39V | 50A/16,5V-500A/39V |
| Open circuit voltage | 17-50 V | 17-50 V |
| Open circuit power | 440 W | 440 W |
| with cooling unit | 620 W | 620 W |
| Efficiency at max current | 82% | 82% |
| Power factor at max current | 0,92 | 0,92 |
| Control voltage | 42 V, 50/60 Hz | 42 V, 50/60 Hz |
| Dimensions l x w x h | 812 x 552 x 925 | 812 x 552 x 925 |
| Weight | 214 kg | 215 kg |
| with cooling unit | 228 kg | 229 kg |
| Operating temperature | -10 to +40°C | -10 to +40°C |
| Enclosure class | IP 23 | IP 23 |
| Application classification |  |  |


Duty cycle

The duty cycle refers to the time as a percentage of a ten-minute period that you can weld at a certain load without overloading.

Enclosure class

The IP code indicates the enclosure class, i. e. the degree of protection against penetration by solid objects or water. Equipment marked IP23 is designed for indoor and outdoor use.

Application class

The symbol  indicates that the power source is designed for use in areas with increased electrical hazard.

5 INSTALLATION

The installation must be executed by a professional.

Note!

Connect the power source to the electricity mains with a network impedance of 0.230Ω (Mig 410w), 0.155Ω (Mig 510w) or lower. If the network impedance is higher, there is a risk of flicker in the illuminators.




WARNING!

This product is intended for industrial use. In a domestic environment this product may cause radio interference. It is the user's responsibility to take adequate precautions.

Lifting instructions


The power supply should be lifted by means of its lifting eye. The handle is only intended for pulling it along the ground.

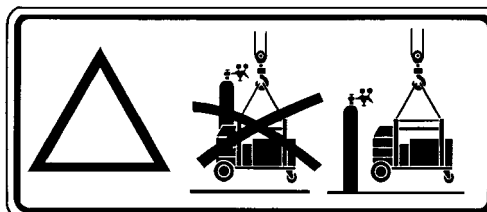

5.1 Placing

Position the welding power source such way that its cooling air inlets and outlets are not obstructed.

5.2 Assembly of components

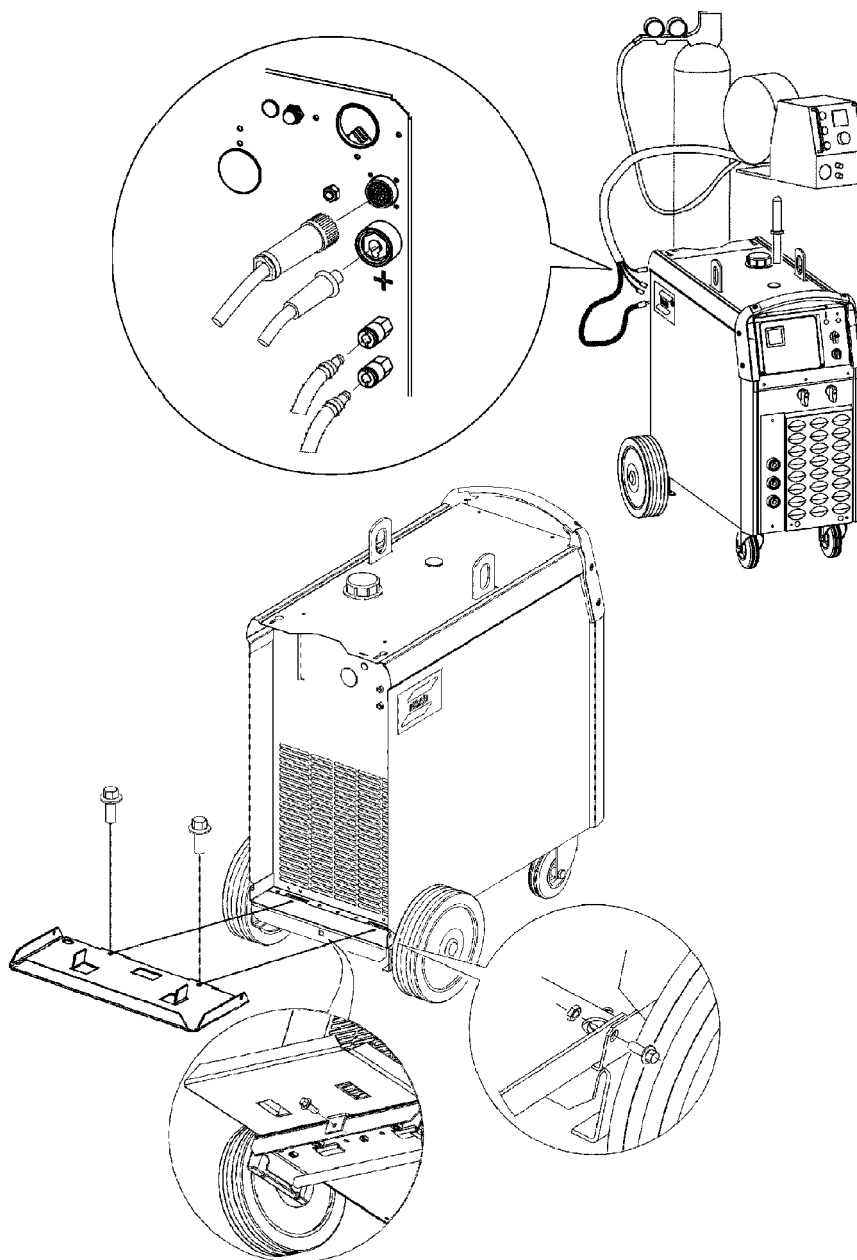


WARNING!

During transport, the rear wheels of the power source are in their forward position. Before use, place the wheels in their rear position.

5.3 Assembly of counter balance


Assemble the stabilizer + CB KIT if the counter balance is to be installed on machine.
The stabilizer + CB KIT is an accessory. Ordering number you can find on page 22.

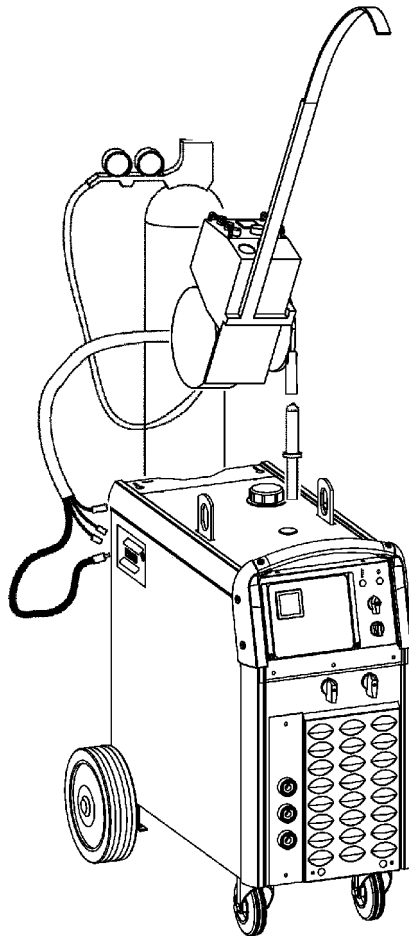




Attention! Utilization of counter balance without stabilizer may cause the machine tipping over.

5.4 Electrical installation

Origo™ Mig 410

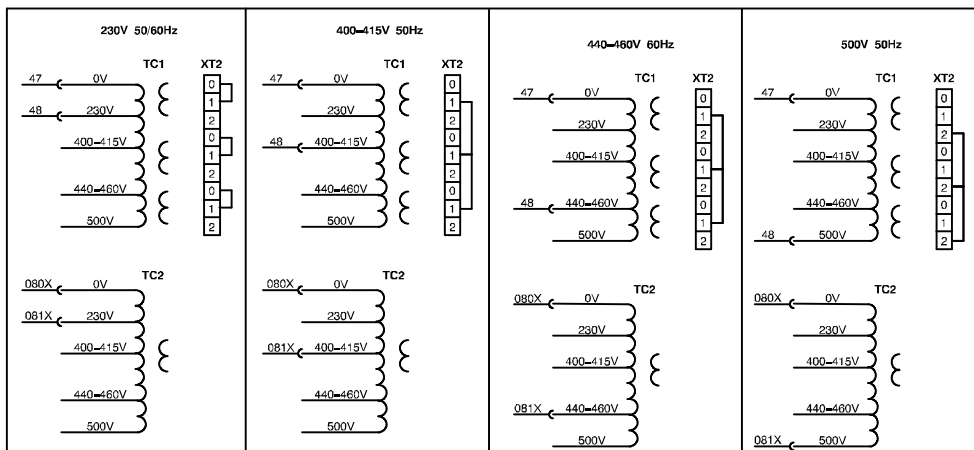


Origo™ Mig 510

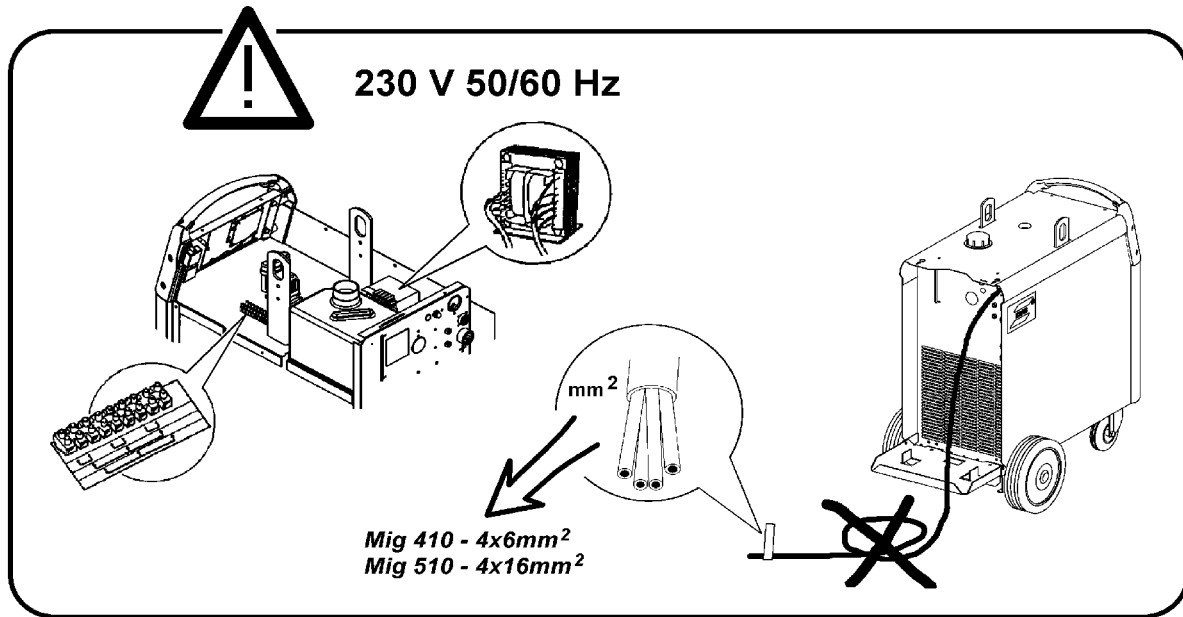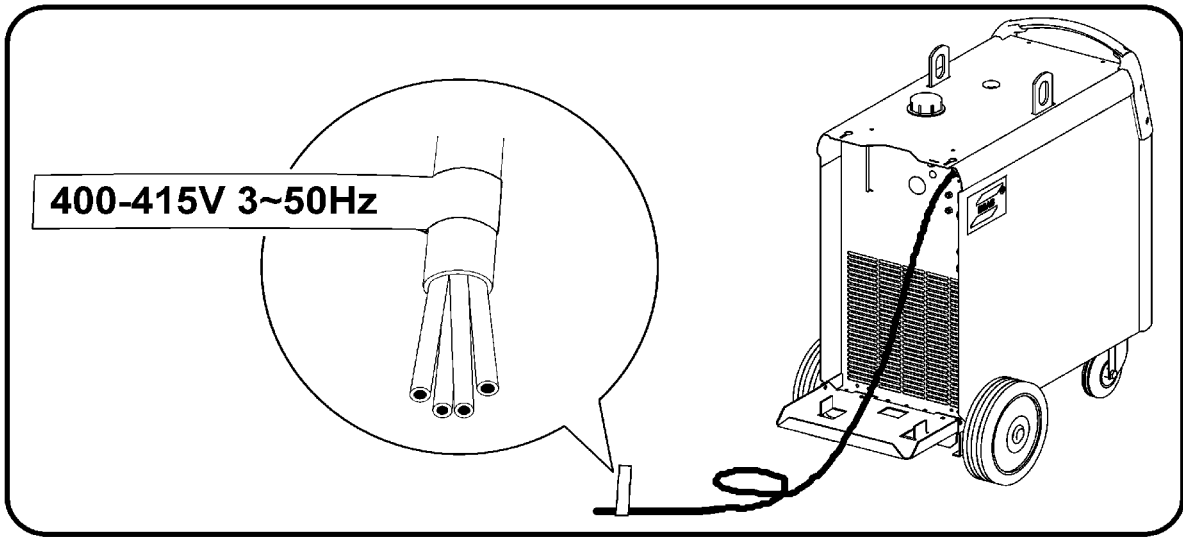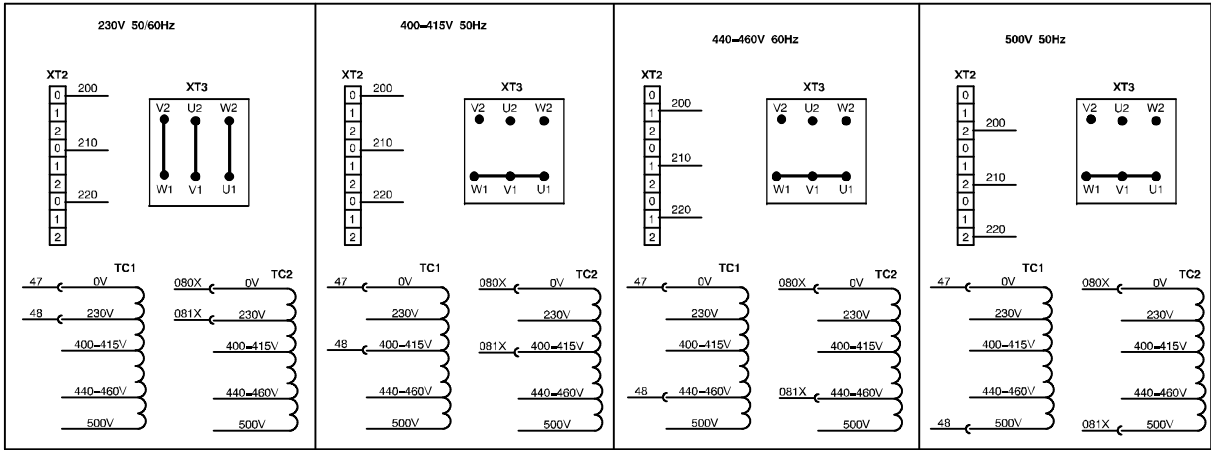

5.5 Mains power supply

Check that the unit is connected to the correct mains power supply voltage, and that it is protected by the correct fuse size. A protective earth connection must be made, in accordance with regulations.

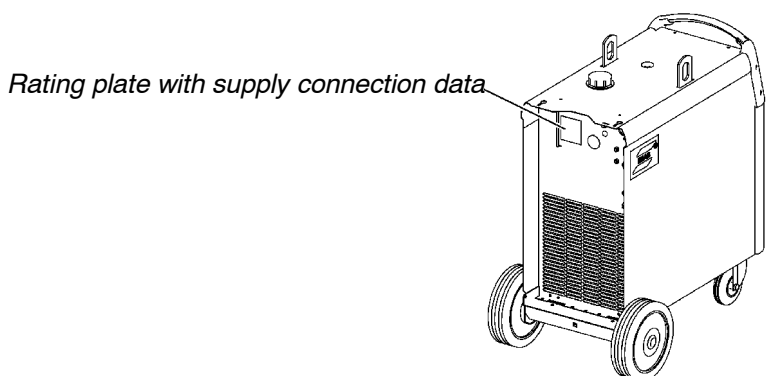

| Origo™ Mig 410 | 3~ 50 Hz | 3~ 50/60 Hz | 3~ 50 Hz | 3~ 60 Hz | 3~ 60 Hz |
|----------------------------------|----------|-------------|----------|----------|----------|
| Voltage V | 230 | 400/415 | 500 | 230 | 440/460 |
| Current A | | | | | |
| at 100% duty cycle | 28 | 16 | 13 | 28 | 14 |
| at 60% duty cycle | 42 | 24 | 19 | 41 | 21 |
| at 50% duty cycle | 45 | 28 | 20 | 45 | 22 |
| Cable area mm² | 4 x 6 | 4 x 2,5 | 4 x 2,5 | 4 x 6 | 4 x 2,5 |
| Fuse, slow A | 25 | 20 | 20 | 25 | 20 |

| Origo™ Mig 510 | 3~ 50 Hz | 3~ 50/60 Hz | 3~ 50 Hz | 3~ 60 Hz | 3~ 60 Hz |
|----------------------------------|----------|-------------|----------|----------|----------|
| Voltage V | 230 | 400/415 | 500 | 230 | 440/460 |
| Current A | | | | | |
| at 100% duty cycle | 43 | 25 | 20 | 43 | 23 |
| at 60% duty cycle | 68 | 39 | 31 | 68 | 35 |
| Cable area mm² | 4 x 16 | 4 x 6 | 4 x 6 | 4 x 16 | 4 x 6 |
| Fuse, slow A | 63 | 35 | 35 | 63 | 25 |

NB: The mains cable areas and fuse sizes as shown above are in accordance with Swedish regulations. They may not be applicable in other countries: make sure that the cable area and fuse sizes comply with the relevant national regulations.

6 OPERATION

General safety regulations for the handling of the equipment can be found on page 3. Read through before you start using the equipment!



WARNING - TIPPING RISK!

There is a risk of tipping while transportation and operation, if the welding machine leans more than 10°. In that case appropriate securing has to be provided !


6.1 Connection and control devices

- | | | | |
|---|--|----|--|
| 1 | Mains supply switch | 9 | Connection for return cable (-), medium inductance (Mig 510) |
| 2 | Main supply switch for cooling unit ELP** | 10 | Connection for return cable (-), low inductance |
| 3 | Switch, precise control | 11 | Connection for welding current cable (+) |
| 4 | Switch, coarse control | 12 | Connection for control cable for wire feeder |
| 5 | Indicating lamp, power supply ON | 13 | MCB |
| 6 | Orange indicating lamp, overheating and loss of coolant* | 14 | Connection RED for cooling water from the wire feed unit |
| 7 | Space for digital meter (optional), see page 20 | 15 | Connection BLUE for cooling water to the wire feed unit |
| 8 | Connection for return cable (-), high inductance | | |

NOTE! Cooling water connections only available on certain models.

* Indicating loss of coolant, only when water flow guard is used, see point 6.5

** ELP = ESAB Logic Pump, see point 6.4.

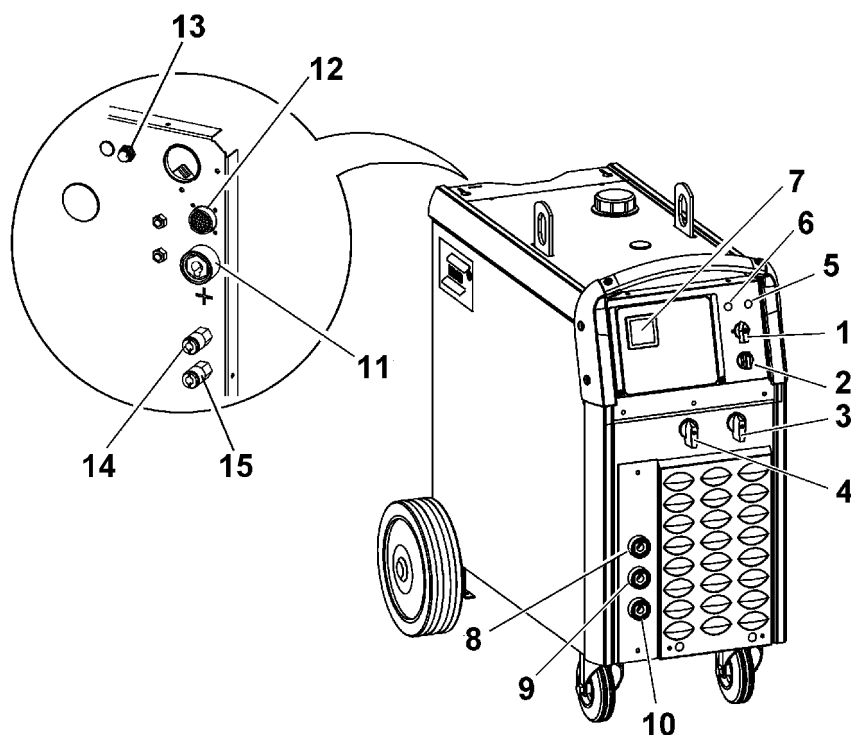

6.2 Start

When switched on, indicating lamps are checked for 2 seconds. Normally, if the machine is not overheated, it should start to work in idle mode, which is indicated by blinking of the supply-ON lamp. The fan and the coolant pump are stopped.

The fan starts from the first start of welding. The coolant pump starts at the same moment, if it is switched on by means of either the ELP switch on the wire feeder, or the pump supply switch on the power source.

6.3 Overheating protection

The power source has 2-step control of fan speed and overheating protection. If temperature crosses the threshold point, the fan starts to operate with increased speed. If the internal temperature becomes too high, the welding is interrupted and disabled. This state is indicated by permanent lighting of the orange indicating lamp on the front of the unit. It resets automatically when the temperature falls down.

6.4 Water connection

The Origo™ Feed has a sensor **ELP, ESAB Logic Pump**, which senses whether the water hoses of the welding gun are connected. When a water-cooled welding gun is connected, the water pump is active. For the Feeds the pump supply switch on the power source should be left in position "0/ELP".

It is recommended to switch the power source off by means of the mains switch ON/OFF for connecting the cooling water hoses to/from the Feed wire feed unit.

The pump supply switch must be in position "I" exclusively for other types of wire feeders, when a water-cooled welding gun is used. When a self-cooled welding gun is used the pump switch must be in position "ELP/0".

Note, if a water-cooled welding gun is used when the pump is inactive, the welding gun might be damaged.

6.5 Water flow guard

The water flow guard interrupts and disables the welding in the event of loss of coolant. This state is indicated by blinking of the orange indicating lamp on the front of the power source. If there is a lack of coolant flow, after 1 min the pump is switched off and latched in this state. The pump restarts from this state along with starting of welding.

The water flow guard is an accessory. Ordering number see on page 20.

6.6 Idle mode

The machine has an idle mode. The fan is switched off 5 min after the last welding or after 5 min of work with decreased speed without welding. The pump is switched off 3 min after the last welding. When both fan and pump are switched off the power-supply lamp on the front panel is blinking.

6.7 Inductance

Higher inductance produces a more flowing weld and fewer spatters. Lower inductance produces a harsher sound and a stable, concentrated arc.

7 MAINTENANCE

Regular maintenance is important for safe, reliable operation.

Note!

All guarantee undertakings from the supplier cease to apply if the customer himself attempts any work in the product during the guarantee period in order to rectify any faults.

7.1 Inspection and cleaning

Check regularly that the power source is free from dirt.


The power source should be regularly blown clean using dry compressed air at reduced pressure. More frequently in dirty environments.

Otherwise the air inlet/outlet may become blocked and cause overheating. To avoid this you can use an airfilter.

The airfilter is an accessory. Ordering number can be found on page 21.

7.2 Topping up the coolant

We recommend a 50/50 % mixture of water and ethylene glycol.

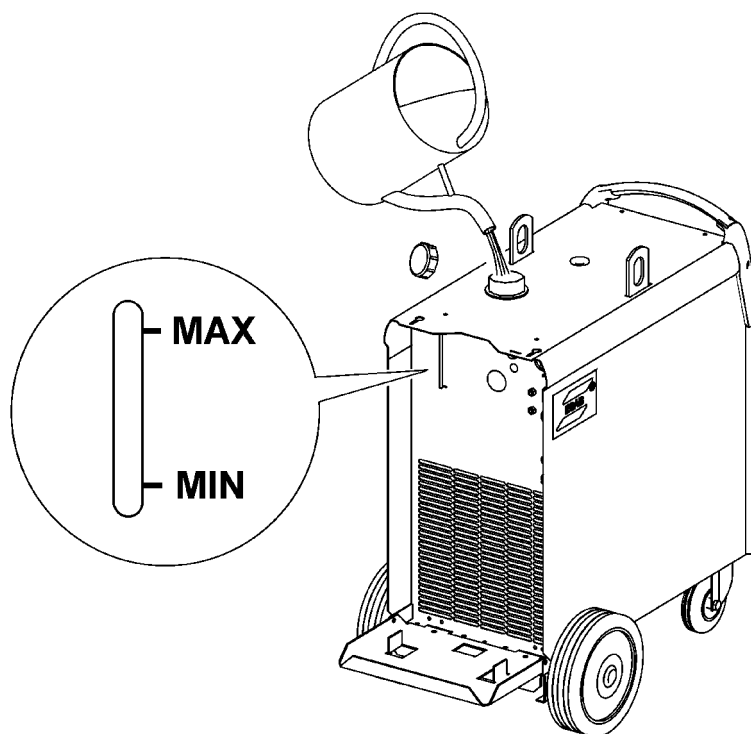

8 FAULT TRACING

Try these recommended checks and inspections before sending for an authorised service technician.

| Type of fault | Actions |
|---|---|
| No arc | <ul style="list-style-type: none"> • Check that the mains power supply switch is turned on. • Check that the welding current supply and return cables are correctly connected. • Check that correct current value is set. • Check to see whether the MCB has tripped. |
| Welding current is interrupted during welding | <ul style="list-style-type: none"> • Check whether the thermal overload trip has operated (indicated by the orange lamp on the front). • Check the main power supply fuses. |
| Thermal overload trips operate frequently | <ul style="list-style-type: none"> • Check to see whether the air filters are clogged. • Make sure that you are not exceeding the rated data for the power source (i.e. that the unit is not being overloaded). |
| Poor welding performance | <ul style="list-style-type: none"> • Check that the welding current supply and return cables are correctly connected. • Check that the correct current value is set. • Check that the correct welding wires are being used. • Check the main power supply fuses. |




9 ORDERING OF SPARE PARTS

Origo™ Mig 410 & Origo™ Mig 510 is designed and tested in accordance with the international and European standards IEC/EN 60974-1 and EN 60974-10. It is the obligation of the service unit which has carried out the service or repair work to make sure that the product still conforms to the said standard.




Spare parts may be ordered through your nearest ESAB dealer, see the last page of this publication.

Diagram


Origo™ Mig 410 (400-415V)

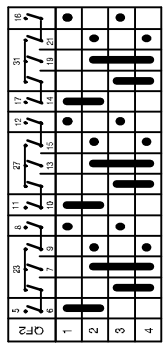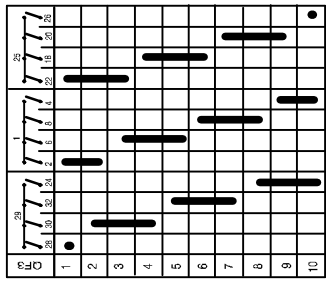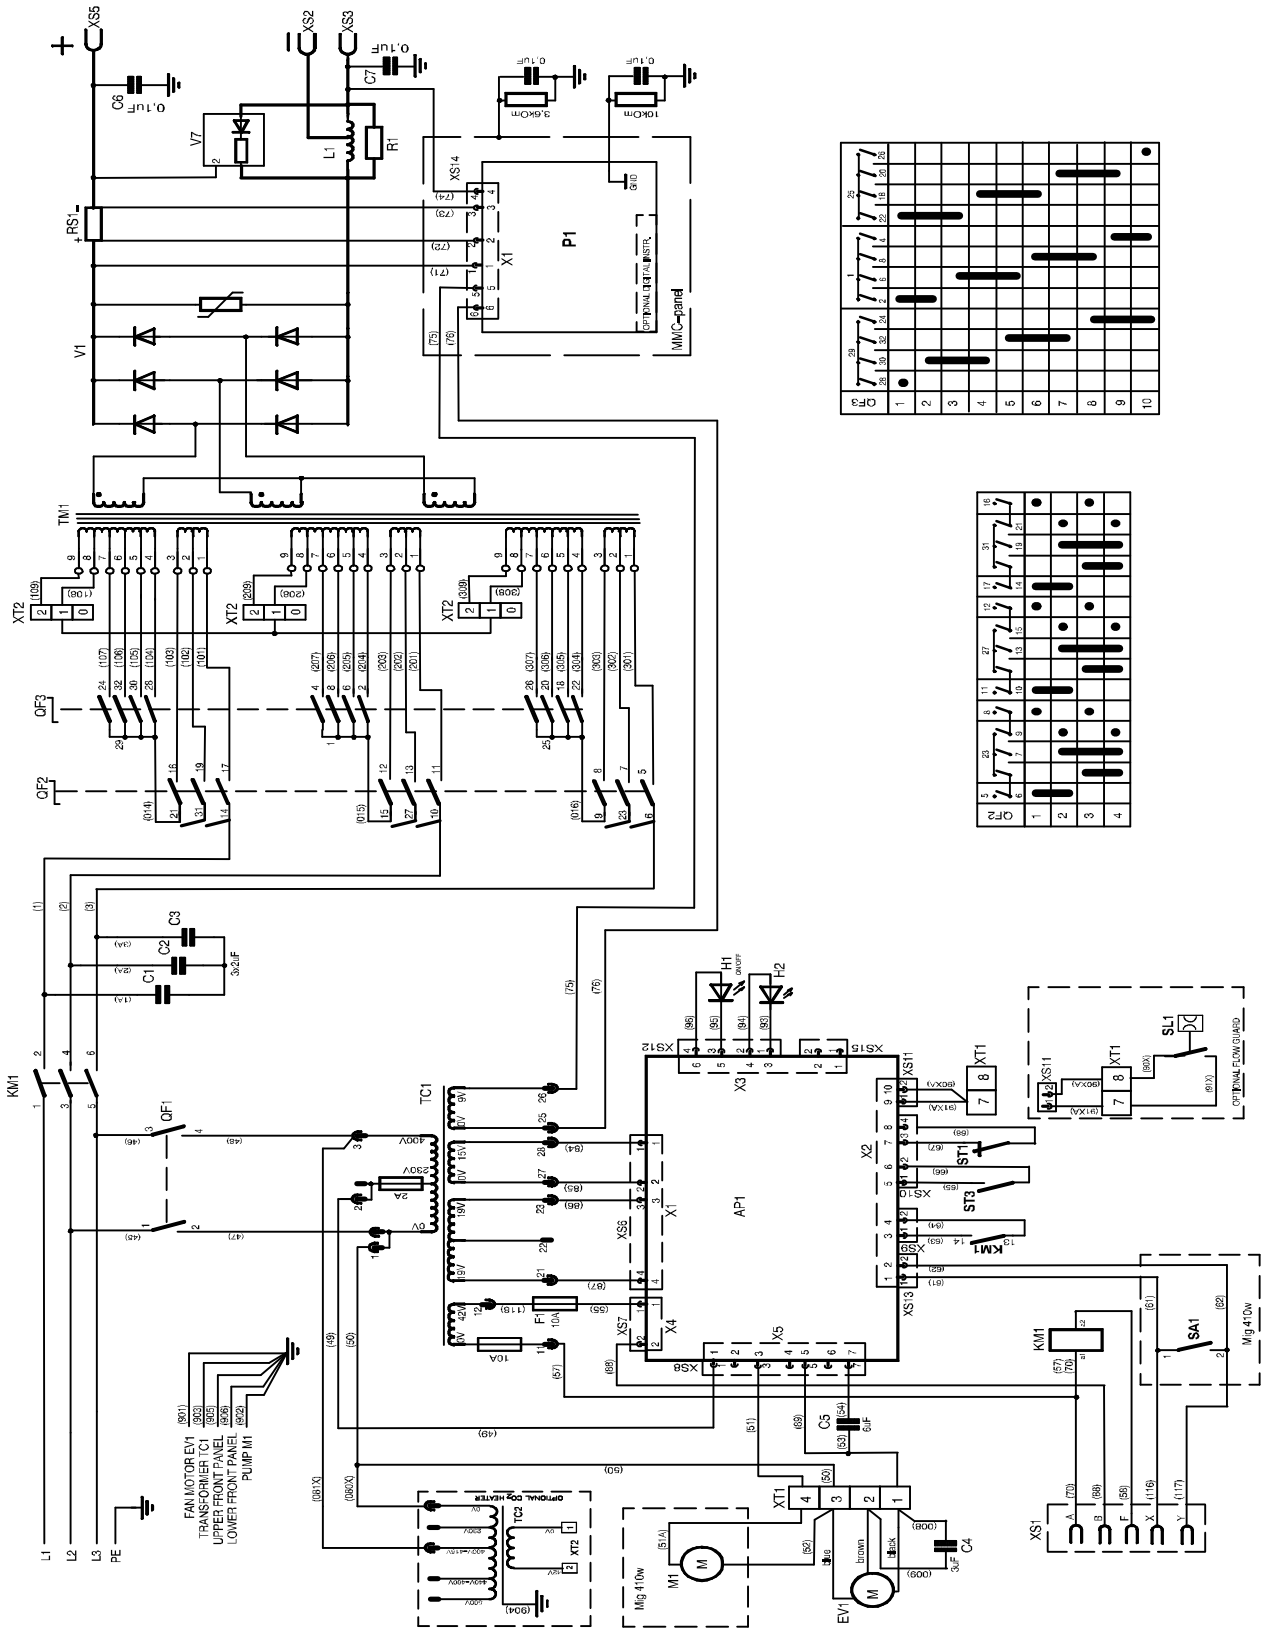


Origo™ Mig 410 (230-500V)

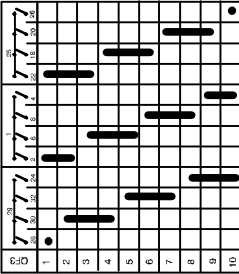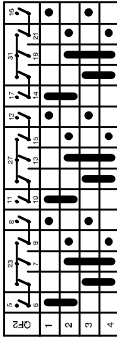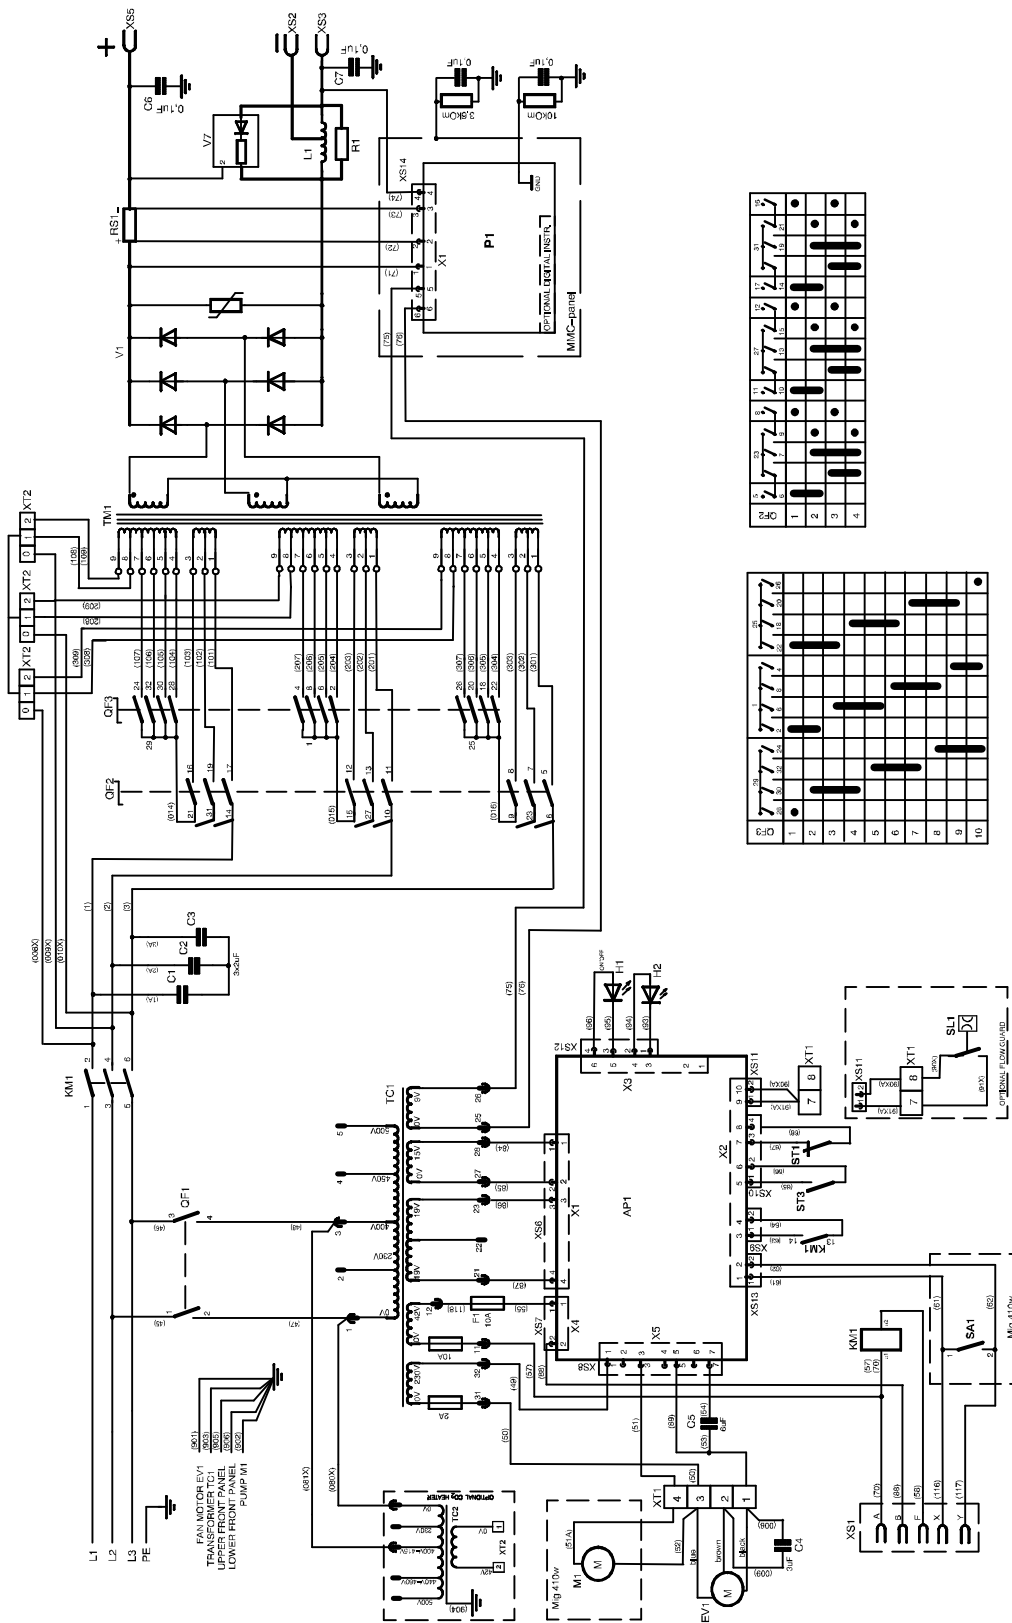

Origo™ Mig 510 (400-415V)

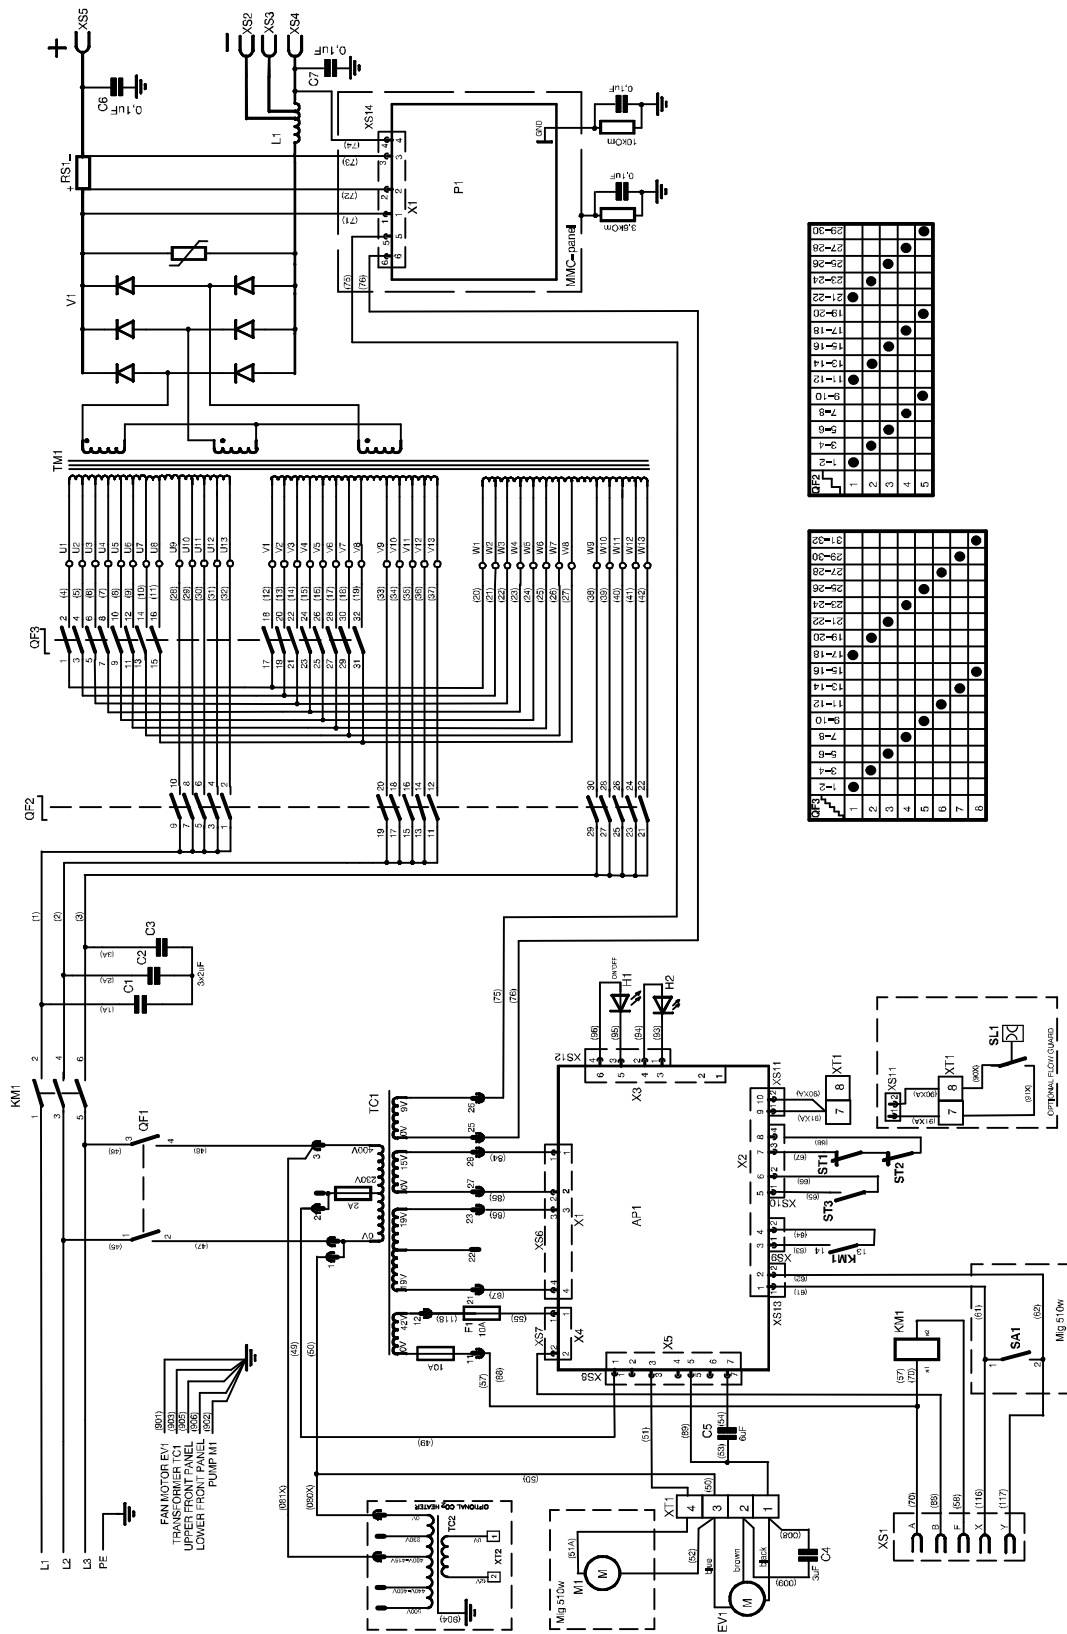

Origo™ Mig 410, Origo™ Mig 510






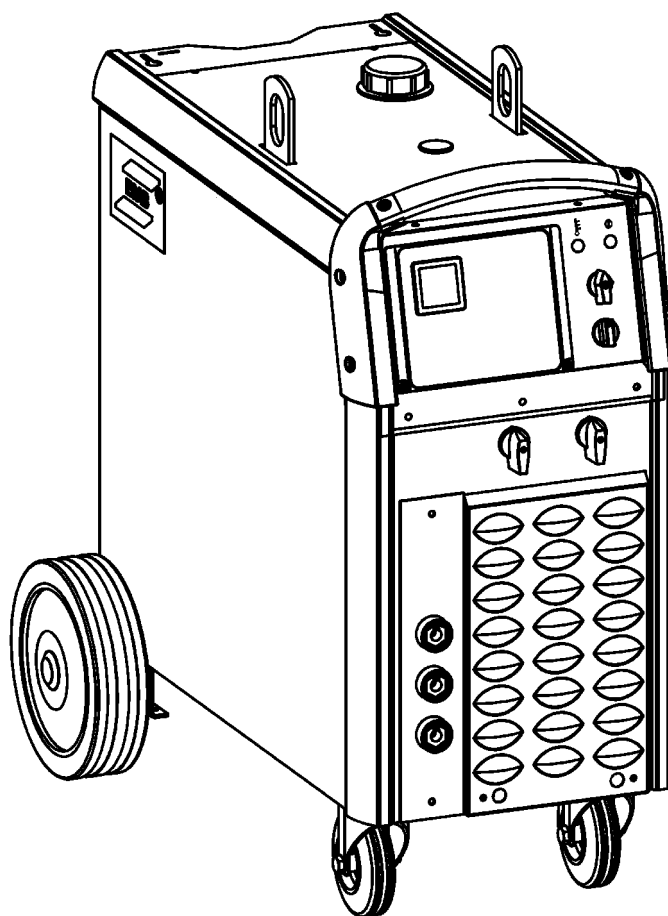






Valid for serial no. 627-XXX-XXXX

Ordering numbers

| | | |
|--------------|-----------------|---|
| 0349 302 408 | Origo™ Mig 410 | 400-415V 3~50Hz |
| 0349 302 713 | Origo™ Mig 410 | 230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz |
| 0349 302 407 | Origo™ Mig 410w | 400-415V 3~50Hz; with water cooler |
| 0349 302 711 | Origo™ Mig 410w | 230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz; with water cooler |
| 0349 303 563 | Origo™ Mig 410 | 400-415V 3~50Hz; with digital instrument |
| 0349 303 564 | Origo™ Mig 410w | 400-415V 3~50Hz; with water cooler, with digital instrument |
| 0349 302 404 | Origo™ Mig 510 | 400-415V 3~50Hz |
| 0349 302 436 | Origo™ Mig 510 | 230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz |
| 0349 302 403 | Origo™ Mig 510w | 400-415V 3~50Hz; with water cooler |
| 0349 302 435 | Origo™ Mig 510w | 230/400-415/500V 3~50Hz; 230/440-460V 3~60Hz; with water cooler |
| 0349 303 565 | Origo™ Mig 510 | 400-415V 3~50Hz; with digital instrument |
| 0349 303 566 | Origo™ Mig 510w | 400-415V 3~50Hz; with water cooler, with digital instrument |

Accessories

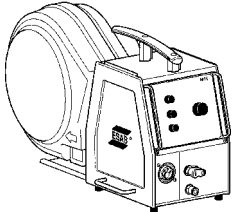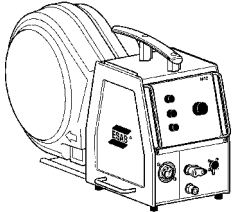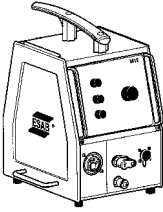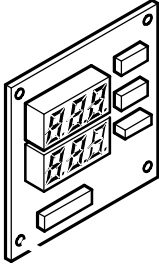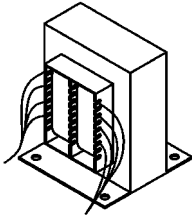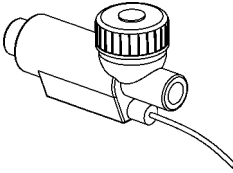
| | |
|---|--|
|  | <p>Feeder with capsulated bobbin, M11 panel</p> <p>Origo™ Feed 302 0459 116 781</p> <p>Origo™ Feed 302 with water 0459 116 791</p> |
|  | <p>Feeder with capsulated bobbin, M12 panel</p> <p>Origo™ Feed 304 0459 116 882</p> <p>Origo™ Feed 304 with water 0459 116 892</p> <p>Origo™ Feed 484 0459 116 982</p> <p>Origo™ Feed 484 with water 0459 116 992</p> |
|  | <p>Feeder for Marathon Pac™, M12 panel</p> <p>Origo™ Feed 304 0459 114 882</p> <p>Origo™ Feed 304 with water 0459 114 892</p> <p>Origo™ Feed 484 0459 114 982</p> <p>Origo™ Feed 484 with water 0459 114 992</p> |
|  | <p>Digital meter</p> <p>for Origo™ Mig 410 0349 302 451</p> <p>for Origo™ Mig 510 0349 302 424</p> |
|  | <p>Transformer kit for CO₂ heater 0349 302 250</p> |
|  | <p>Water flow guard 0349 302 251</p> |
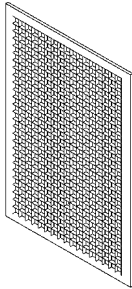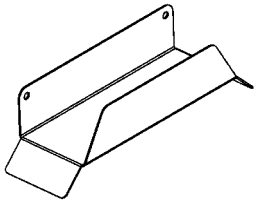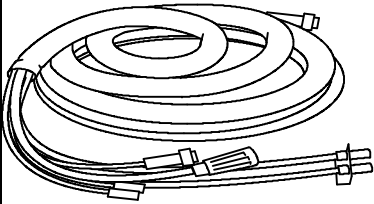
| | |
|---|---|
|  | <p>Filter 0349 302 423</p> |
|  | <p>Cable holder 0349 303 362</p> |
|  | <p>Connection sets for 400A machines</p> <p>Connection set 1,7m 0469 836 880</p> <p>Connection set 10m 0469 836 881</p> <p>Connection set 15m 0469 836 882</p> <p>Connection set 25m 0469 836 883</p> <p>Connection set 35m 0469 836 884</p> <p>Connection set 1,7m, water 0469 836 885</p> <p>Connection set 10m, water 0469 836 886</p> <p>Connection set 15m, water 0469 836 887</p> <p>Connection set 25m, water 0469 836 888</p> <p>Connection set 35m, water 0469 836 889</p> <p>Connection sets for 500A machines</p> <p>Connection set 1,7m 0469 836 890</p> <p>Connection set 10m 0469 836 891</p> <p>Connection set 15m 0469 836 892</p> <p>Connection set 25m 0469 836 893</p> <p>Connection set 35m 0469 836 894</p> <p>Connection set 1,7m, water 0469 836 895</p> <p>Connection set 10m, water 0469 836 896</p> <p>Connection set 15m, water 0469 836 897</p> <p>Connection set 25m, water 0469 836 898</p> <p>Connection set 35m, water 0469 836 899</p> |
|  | <p>Stabilizer 0349 303 474</p> |

CB KIT (cpl.) 0349 305 812

CONTAINS:

- KIT for Counter Balance (0349 309 748)
- Stabilizer (0349 303 474)

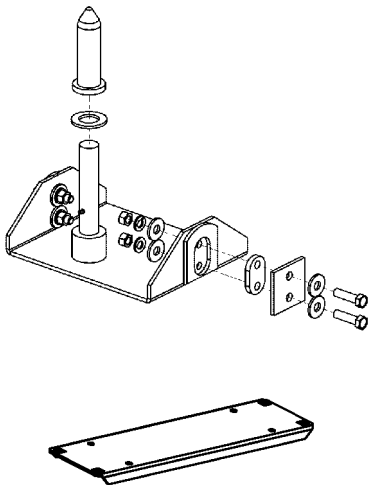

ESAB subsidiaries and representative offices

Europe

AUSTRIA

ESAB Ges.m.b.H
Vienna-Liesing
Tel: +43 1 888 25 11
Fax: +43 1 888 25 11 85

BELGIUM

S.A. ESAB N.V.
Brussels
Tel: +32 2 745 11 00
Fax: +32 2 745 11 28

THE CZECH REPUBLIC

ESAB VAMBERK s.r.o.
Vamberk
Tel: +420 2 819 40 885
Fax: +420 2 819 40 120

DENMARK

Aktieselskabet ESAB
Herlev
Tel: +45 36 30 01 11
Fax: +45 36 30 40 03

FINLAND

ESAB Oy
Helsinki
Tel: +358 9 547 761
Fax: +358 9 547 77 71

FRANCE

ESAB France S.A.
Cergy Pontoise
Tel: +33 1 30 75 55 00
Fax: +33 1 30 75 55 24

GERMANY

ESAB GmbH
Solingen
Tel: +49 212 298 0
Fax: +49 212 298 218

GREAT BRITAIN

ESAB Group (UK) Ltd
Waltham Cross
Tel: +44 1992 76 85 15
Fax: +44 1992 71 58 03

ESAB Automation Ltd

Andover
Tel: +44 1264 33 22 33
Fax: +44 1264 33 20 74

HUNGARY

ESAB Kft
Budapest
Tel: +36 1 20 44 182
Fax: +36 1 20 44 186

ITALY

ESAB Saldatura S.p.A.
Mesero (Mi)
Tel: +39 02 97 96 81
Fax: +39 02 97 28 91 81

THE NETHERLANDS

ESAB Nederland B.V.
Amersfoort
Tel: +31 33 422 35 55
Fax: +31 33 422 35 44

NORWAY

AS ESAB
Larvik
Tel: +47 33 12 10 00
Fax: +47 33 11 52 03

POLAND

ESAB Sp.zo.o.
Katowice
Tel: +48 32 351 11 00
Fax: +48 32 351 11 20

PORTUGAL

ESAB Lda
Lisbon
Tel: +351 8 310 960
Fax: +351 1 859 1277

SLOVAKIA

ESAB Slovakia s.r.o.
Bratislava
Tel: +421 7 44 88 24 26
Fax: +421 7 44 88 87 41

SPAIN

ESAB Ibérica S.A.
Alcalá de Henares (MADRID)
Tel: +34 91 878 3600
Fax: +34 91 802 3461

SWEDEN

ESAB Sverige AB
Gothenburg
Tel: +46 31 50 95 00
Fax: +46 31 50 92 22

ESAB international AB

Gothenburg
Tel: +46 31 50 90 00
Fax: +46 31 50 93 60

SWITZERLAND

ESAB AG
Dietikon
Tel: +41 1 741 25 25
Fax: +41 1 740 30 55

North and South America

ARGENTINA

CONARCO
Buenos Aires
Tel: +54 11 4 753 4039
Fax: +54 11 4 753 6313

BRAZIL

ESAB S.A.
Contagem-MG
Tel: +55 31 2191 4333
Fax: +55 31 2191 4440

CANADA

ESAB Group Canada Inc.
Mississauga, Ontario
Tel: +1 905 670 02 20
Fax: +1 905 670 48 79

MEXICO

ESAB Mexico S.A.
Monterrey
Tel: +52 8 350 5959
Fax: +52 8 350 7554

USA

ESAB Welding & Cutting Products
Florence, SC
Tel: +1 843 669 44 11
Fax: +1 843 664 57 48

Asia/Pacific

CHINA

Shanghai ESAB A/P
Shanghai
Tel: +86 21 5308 9922
Fax: +86 21 6566 6622

INDIA

ESAB India Ltd
Calcutta
Tel: +91 33 478 45 17
Fax: +91 33 468 18 80

INDONESIA

P.T. ESABindo Pratama
Jakarta
Tel: +62 21 460 0188
Fax: +62 21 461 2929

JAPAN

ESAB Japan
Tokyo
Tel: +81 3 5296 7371
Fax: +81 3 5296 8080

MALAYSIA

ESAB (Malaysia) Snd Bhd
Selangor
Tel: +60 3 8027 9869
Fax: +60 3 8027 4754

SINGAPORE

ESAB Asia/Pacific Pte Ltd
Singapore
Tel: +65 6861 43 22
Fax: +65 6861 31 95

SOUTH KOREA

ESAB SeAH Corporation
Kyungnam
Tel: +82 55 269 8170
Fax: +82 55 289 8864

UNITED ARAB EMIRATES

ESAB Middle East FZE
Dubai
Tel: +971 4 887 21 11
Fax: +971 4 887 22 63

Representative offices

BULGARIA

ESAB Representative Office
Sofia
Tel/Fax: +359 2 974 42 88

EGYPT

ESAB Egypt
Dokki-Cairo
Tel: +20 2 390 96 69
Fax: +20 2 393 32 13

ROMANIA

ESAB Representative Office
Bucharest
Tel/Fax: +40 1 322 36 74

RUSSIA

LLC ESAB
Moscow
Tel: +7 095 543 9281
Fax: +7 095 543 9280

LLC ESAB

St Petersburg
Tel: +7 812 336 7080
Fax: +7 812 336 7060

Distributors

For addresses and phone numbers to our distributors in other countries, please visit our home page

www.esab.com



ESAB AB
SE-695 81 LAXÅ
SWEDEN
Phone +46 584 81 000



www.esab.com